 




Thinking of you
Electrolux



EFP60565OX

EFP90565OX

EFP90540OX

EFP60540OX

CA6400IS-X

CA9400IS-X

CA6600IS-X

CA9600IS-X

CA6400I-X

CA9400I-X

EN USER MANUAL

DE GEBRAUCHSANLEITUNG

FR MANUEL D'UTILISATION

NL GEBRUIKSAANWIJZING

ES MANUAL DE USO

PT LIVRO DE INSTRUÇÕES

PARA UTILIZAÇÃO

IT LIBRETTO DI USO

SV ANVÄNDNINGSHANDBOK

NO BRUKSVEILEDNING

FI KÄYTTÖOHJEET

DA BRUGSVEJLEDNING

RU РУКОВОДСТВО ПО

ЭКСПЛУАТАЦИИ

ET KASUTUSJUHEND

LV LIETOŠANAS PAMĀCĪBA

LT NAUDOTOJO VADOVAS

UK ІНСТРУКЦІЯ З

ЕКСПЛУАТАЦІЇ

HU HASZNÁLATI ÚTMUTATÓ

CS NÁVOD K POUŽITÍ

SK NÁVOD NA POUŽIVANIE

RO MANUAL DE FOLOSIRE

PL INSTRUKCJA UŻYTKOWANIA

HR KNJIŽICA S UPUTAMA

SL NAVODILO ZA UPORABO

EL ΟΔΗΓΙΕΣ ΧΡΗΣΗΣ

TR KULLANIM KİTAPÇIĞI

BG РЪКОВОДСТВО НА

ПОТРЕБИТЕЛЯ

KK ПАЙДАЛАНУЧЫ НҰСҚАУЛЫҒЫ

MK УПАТСТВО ЗА КОРИСНИК

SQ UDHEËZUES PËR PËRDORIMIN

SR КОРИСНИЧКО УПУТСТВО

دليل الهمت خدم AR

EN USER MANUAL	3
DE GEBRAUCHSANLEITUNG	7
FR MANUEL D'UTILISATION	11
NL GEBRUIKSAANWIJZING	15
ES MANUAL DE USO	19
PT LIVRO DE INSTRUÇÕES PARA UTILIZAÇÃO	23
IT LIBRETTO DI USO	27
SV ANVÄNDNINGSHANDBOK	31
NO BRUKSVEILEDNING	35
FI KÄYTTÖOHJEET	39
DA BRUGSVEJLEDNING	43
RU РУКОВОДСТВО ПО ЭКСПЛУАТАЦИИ	47
ET KASUTUSJUHEND	51
LV LIETOŠANAS PAMĀCĪBA	55
LT NAUDOTOJO VADOVAS	59
UK ІНСТРУКЦІЯ З ЕКСПЛУАТАЦІЇ	63
HU HASZNÁLATI ÚTMUTATÓ	67
CS NÁVOD K POUŽITÍ	71
SK NÁVOD NA POUŽÍVANIE	75
RO MANUAL DE FOLOSIRE	79
PL INSTRUKCJA UŻYTKOWANIA	83
HR KNJIŽICA S UPUTAMA	87
SL NAVODILO ZA UPORABO	91
EL ΟΔΗΓΙΕΣ ΧΡΗΣΗΣ	95
TR KULLANIM KİTAPÇIĞI	100
BG РЪКОВОДСТВО НА ПОТРЕБИТЕЛЯ	104
KK ПАЙДАЛАНУШЫ НҮСҚАУЛЬФЫ	108
MK УПАТСТВО ЗА КОРИСНИК	112
SQ UDHEZUES PËR PËRDORIMIN	116
SR КОРИСНИЧКО УПУТСТВО	120
127	كتيب الاستعمال AR

WE'RE THINKING OF YOU

Thank you for purchasing an Electrolux appliance. You've chosen a product that brings with it decades of professional experience and innovation. Ingenious and stylish, it has been designed with you in mind. So whenever you use it, you can be safe in the knowledge that you'll get great results every time. Welcome to Electrolux.

Visit our website to:



Get usage advice, brochures, trouble shooter, service information:
www.electrolux.com



Register your product for better service:
www.electrolux.com/productregistration



Buy Accessories, Consumables and Original spare parts for your appliance:
www.electrolux.com/shop

ENVIRONMENT CONCERNS

Recycle the materials with the symbol . Put the packaging in applicable containers to recycle it. Help protect the environment and human health and to recycle waste of electrical and electronic appliances. Do not dispose appliances marked with the symbol with the household waste. Return the product to your local recycling facility or contact your municipal office department for household waste or the shop where you purchased this product.

CUSTOMER CARE AND SERVICE

We recommend the use of original spare parts.

When contacting Service, ensure that you have the following data available.

The information can be found on the rating plate. Model, PNC, Serial Number.

- Warning / Caution-Safety information.
- General information and tips
- Environmental information.

Subject to change without notice.

1. ! SAFETY INSTRUCTIONS

! Caution! Closely follow the instructions set out in this manual. All responsibility, for any eventual inconveniences, damages or fires caused by not complying with the instructions in this manual, is declined. The extractor hood has been designed exclusively for domestic use.

! Caution! Do not connect the appliance to the mains until the installation is fully complete.

Before any cleaning or maintenance operation, disconnect hood from the mains by removing the plug or disconnecting the mains electrical supply.

Always wear work gloves for all installation and maintenance operations. The appliance is not intended for use by children or persons with impaired physical, sensorial or mental faculties, or if lacking in experience or knowledge, unless they are under supervision or have been trained in the use of the appliance by a person responsible for their safety. This appliance is designed to be operated by adults, children should be monitored to ensure that they do not play with the appliance. This appliance is designed to be operated by adults. Children should not be allowed to tamper with the controls or play with the appliance. Never use the hood without effectively mounted grating! The hood must NEVER be used as a support surface unless specifically indicated. The premises where the appliance is installed must be sufficiently ventilated, when the kitchen hood is used together with other gas combustion devices or other fuels. The ducting system for this appliance must not be connected to any existing ventilation system which is being used for any other purpose such as discharging exhaust fumes from appliances burning gas or other fuels. The flaming of foods beneath the hood itself is severely prohibited. The use of exposed flames is detrimental to the filters and may cause a fire risk, and must therefore be avoided in all circumstances. Any frying must be done with care in order to make sure that the oil does not overheat and ignite.

! Caution! Accessible parts of the hood may become hot when used with cooking appliance.

With regards to the technical and safety measures to be adopted for fume discharging it is important to closely follow the regulations provided by the local authorities. The hood must be regularly cleaned on both the inside and outside (AT LEAST ONCE A MONTH).

This must be completed in accordance with the maintenance instructions provided in this manual). Failure to follow the instructions provided in this user guide regarding the cleaning of the hood and filters will lead to the risk of fires. Do not use or leave the hood without the lamp correctly mounted due to the possible risk of electric shocks. We will not accept any responsibility for any faults, damage or fires caused to the appliance as a result of the non-observance of the instructions included in this manual.

! Warning! Failure to install the screws or fixing device in accordance with these instructions may result in electrical hazards.

2. USE

The hood serves to aspirate the fumes and vapors resulting from cooking.

The attached installation manual indicates the version to be used depending on the model you have, the suction version with

external evacuation  or filtering with internal recirculation .

3. INSTALLATION

The mains power supply must correspond to the rating indicated on the plate situated inside the hood. If provided with a plug connect the hood to a socket in compliance with current regulations and positioned in an accessible area, after installation. If it not fitted with a plug (direct mains connection) or if the plug is not located in an accessible area, after installation, apply a double pole switch in accordance with standards which assures the complete disconnection of the mains under conditions relating to over-current category III in accordance with installation instructions.

! Warning! Before re-connecting the hood circuit to the mains supply and checking the efficient function, always check that the mains cable is correctly assembled.

The minimum distance between the supporting surface for the cooking equipment on the hob and the lowest part of the range hood must be not less than 50cm from electric cookers and 50cm from gas or mixed cookers. If the instructions for installation for the gas hob specify a greater distance, this must be adhered to.

4. MAINTENANCE


ATTENTION! Before performing any maintenance operation, isolate the hood from the electrical supply by switching off at the connector and removing the connector fuse. Or if the appliance has been connected through a plug and socket, then the plug must be removed from the socket. The cooker hood should be cleaned regularly (at least with the same frequency with which you carry out maintenance of the fat filters) internally and externally. Clean using the cloth dampened with neutral liquid detergent. Do not use abrasive products.

DO NOT USE ALCOHOL!

Warning! Failure to carry out the basic cleaning recommendations of the cooker hood and replacement of the filters may cause fire risks. Therefore, we recommend observing these instructions.

The manufacturer declines all responsibility for any damage to the motor or any fire damage linked to inappropriate maintenance or failure to observe the above safety recommendations.

4.1 Grease filter - The grease filter must be cleaned once a month using non aggressive detergents, either by hand or in the dishwasher, which must be set to a low temperature and a short cycle. When washed in a dishwasher, the grease filter may discolour slightly, but this does not affect its filtering capacity.

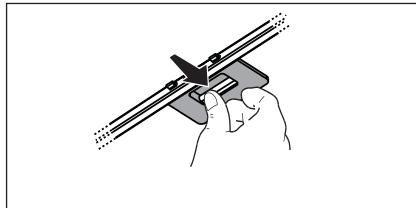


4.2 Washable activated charcoal filter

The saturation of the charcoal filter occurs after more or less prolonged use, depending on the type of cooking and the regularity of cleaning of the grease filter.

In any case it is necessary to replace the cartridge at least every four months.


The charcoal filter may NOT be washed or regenerated.

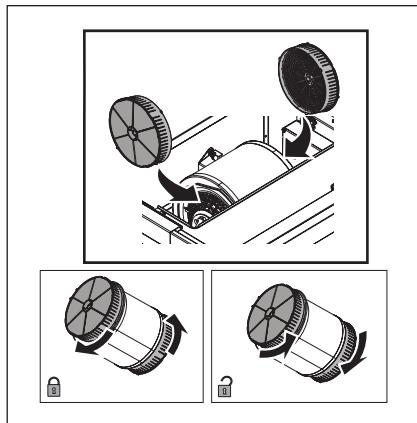

5. CONTROLS

Use the high suction speed in cases of concentrated kitchen vapours. It is recommended that the cooker hood suction is switched on for 5 minutes prior to cooking and to leave in operation during cooking and for another 15 minutes approximately after terminating cooking.

The speed control is on the front of the hood.

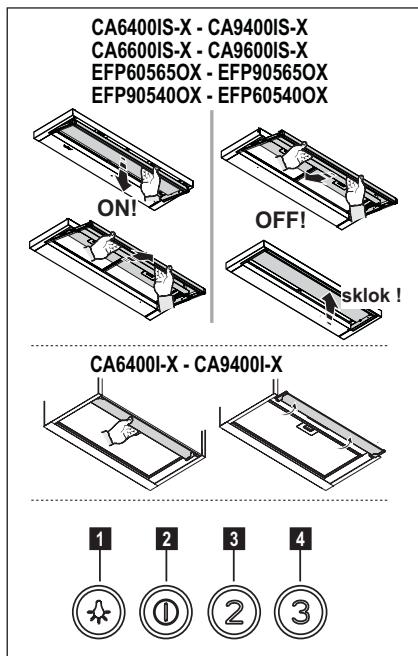


- 1 ON/OFF lights
- 2 ON/OFF motors
- Minimum suction power
- 3 Medium suction power
- 4 Maximum suction power

6. LIGHTING

Disconnect the hood from the electricity.

Warning! Prior to touching the light bulbs ensure they are cooled down.

Replace with a new 12 Volt, 20 Watt (Maximum) halogen light made for a G-4 base SUITABLE FOR USE IN OPEN LUMINAIRES. Follow package directions and do not touch new light with bare hands.

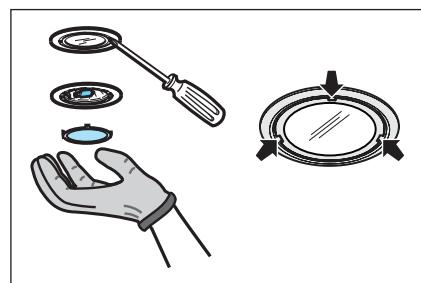



CE

